



UL required safety update notice for Zest 0.7 microwave – model ZE07120s


ZEST

New UL safety regulations have prompted the addition of a 2-step door open function to prevent children from getting burned.

In order to comply with this mandate, a “door open” Function button has been added to the operation template. The complete operating instructions are on the next page (pg. 13 from the updated instruction manual).

Note: When the unit is unplugged, the door can be opened as normal. The door cannot be opened directly during the unit is working or within 30 mins after cooking cycle ends. If exceeding 30 mins after cooking, the door will be unlocked automatically.

CONTROL PANEL

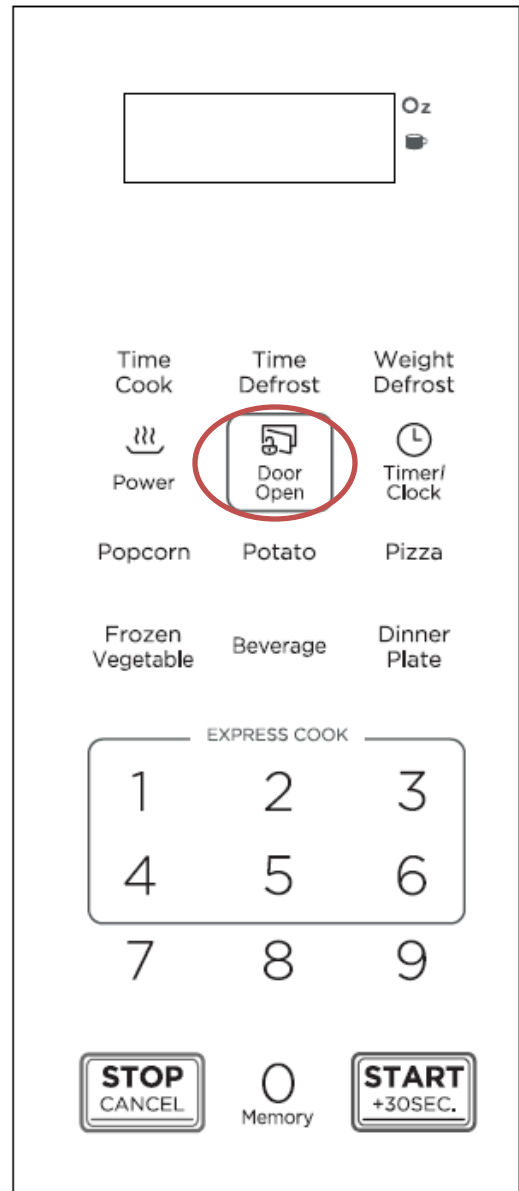

OPERATION

1. Safety Lock


Safety Lock is a system that safeguards against unintended activation of the oven, providing a protective measure to ensure child safety.

(1) How the safety lock works


Initiating a cooking process triggers the door lock, and it also engages if the door remains unlocked for additional 30 minutes following the completion of the cooking.

Safety Lock is active by default. It will only be deactivated if the user chooses to do so manually. Even in the event of a power disconnection, the oven will preserve the state of the safety lock, whether it is activated or deactivated.

(2) Unlock the door


Press  during operation and open the door within 10 seconds, or the safety lock will re-engage. The door will stay unlocked until cooking is initiated.

Or:

Press  within 30 minutes after cooking is complete to manually disable the door lock and switch to standby mode. If no key is pressed, the safety lock will automatically disengage after 30 minutes.


(3) Deactivate the safety lock

If there are no children in the house, you can choose to permanently deactivate the safety lock function.

Press "7", "9" in consecutive order and then press and hold  for three seconds within 30 seconds, the screen will display "ULoc", indicating the successful deactivation of the safety lock.



(4) Re-activate the safety lock

Press "7", "9" in consecutive order and then press and hold  for three seconds within 30 seconds, the screen will display "Loc", indicating the successful re-activation of the safety lock.